


# UH8

UFM UNDER FLOOR MANIFOLD

- LIVE —
- SWITCH LIVE —
- NEUTRAL —
- EARTH —
- END SWITCH AND BOILER ENABLE —

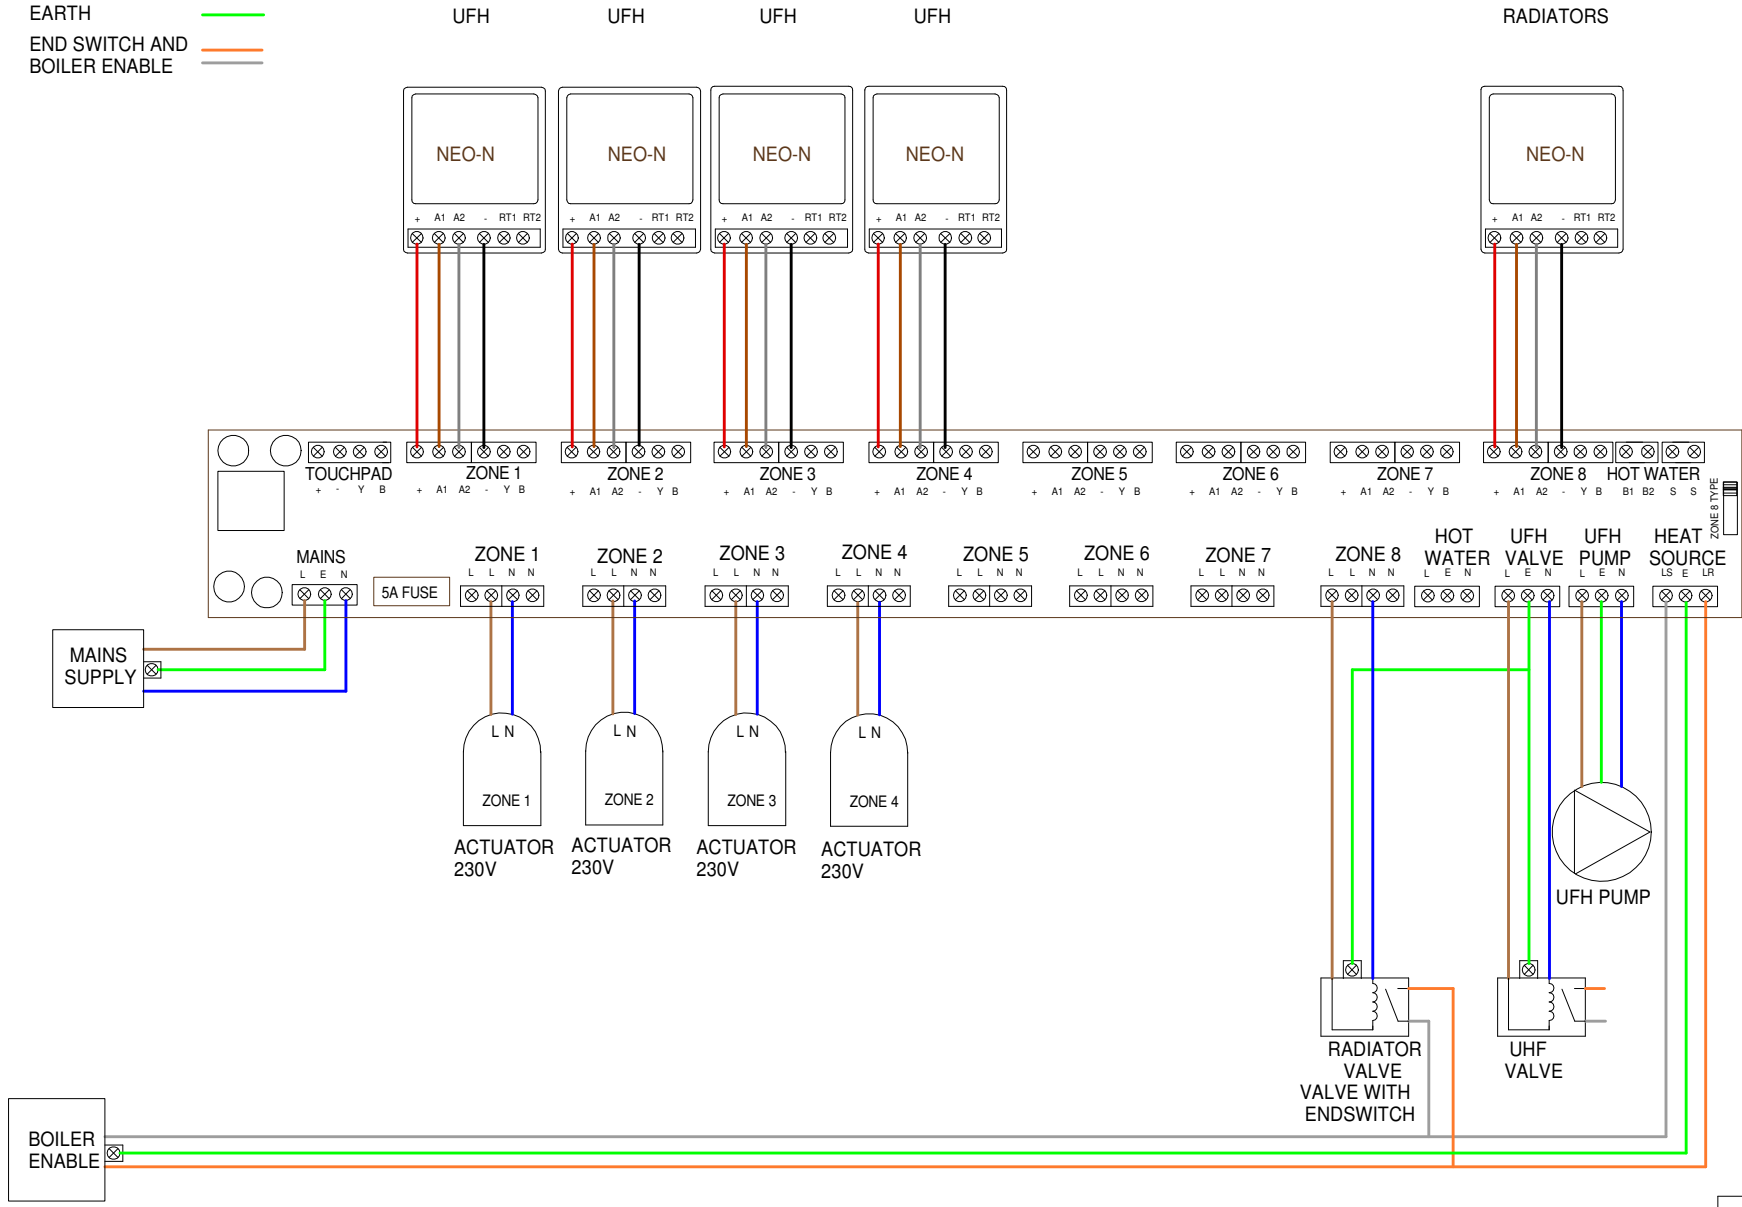

This Equipment should be installed by an appropriately qualified/ registered electrician.  
 Fully read the instructions for proper wiring before applying power.  
 The warranty does not cover damage from improper wiring or installation.

DRAWING 2
NEO TO UH8 WIRING DIAGRAM
13/05/2015