


# UH4

UFM UNDER FLOOR MANIFOLD

- LIVE ————
- SWITCH LIVE ————
- NEUTRAL ————
- EARTH ————
- END SWITCH AND BOILER ENABLE ————

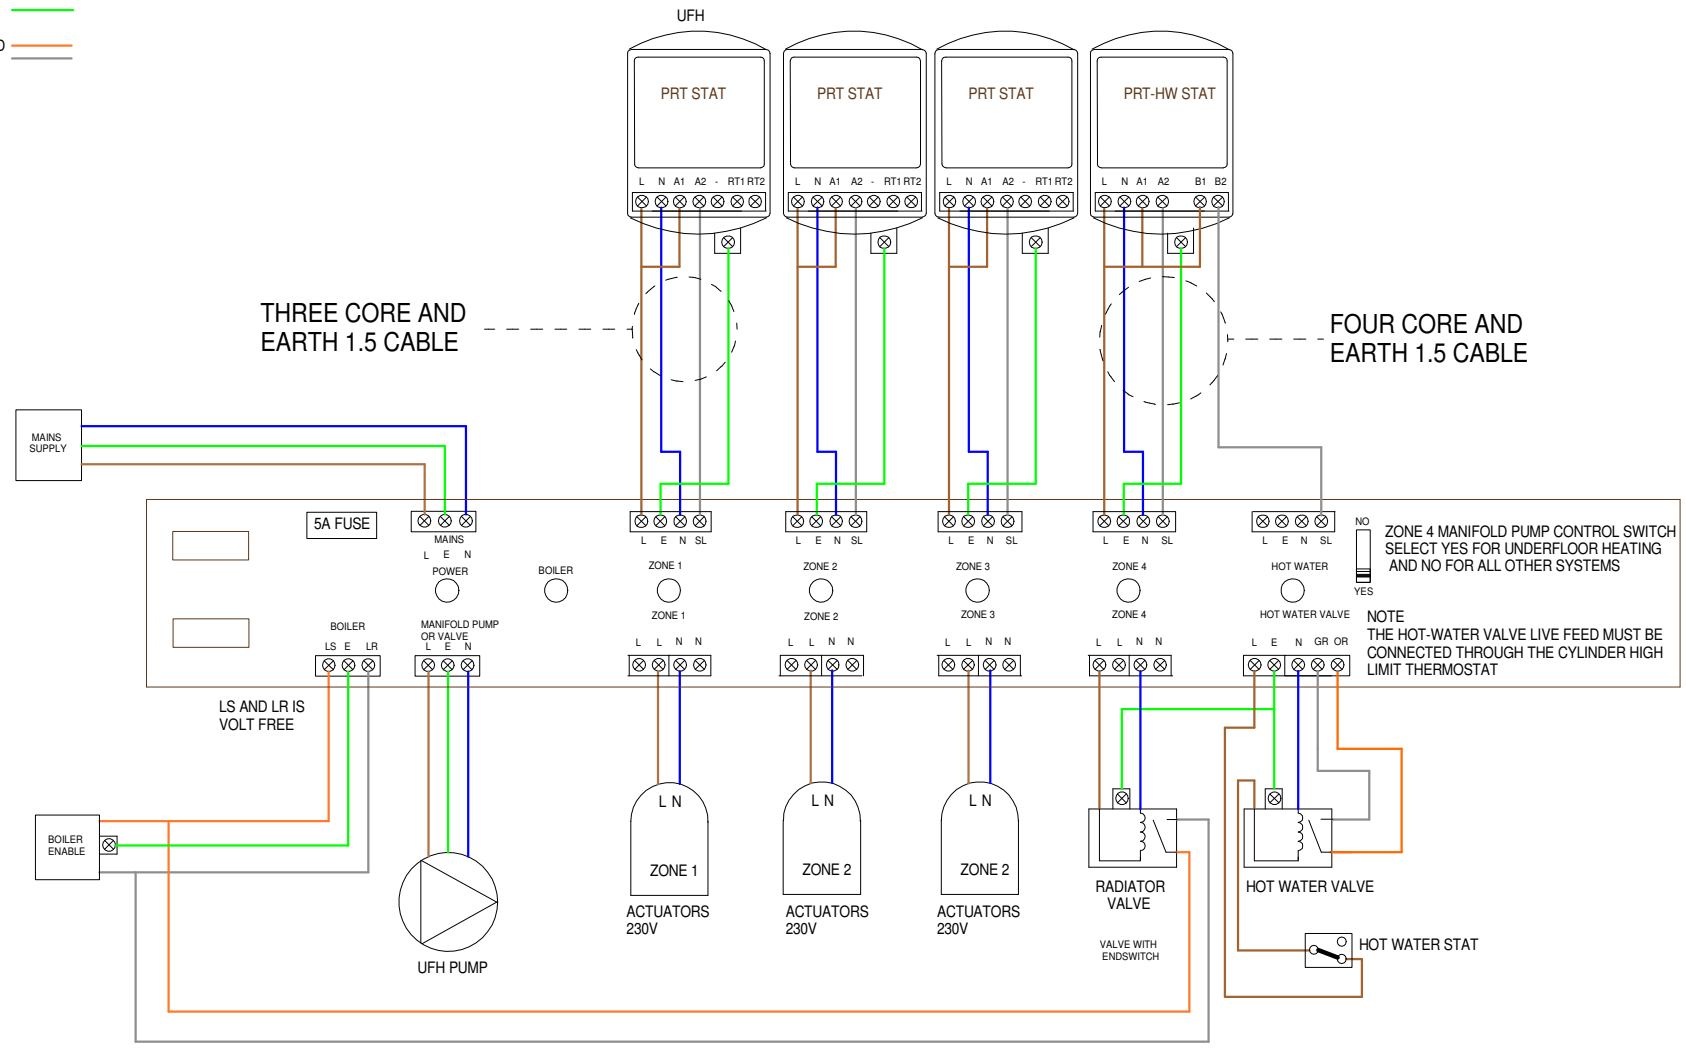

THREE CORE AND EARTH 1.5 CABLE

FOUR CORE AND EARTH 1.5 CABLE

ZONE 4 MANIFOLD PUMP CONTROL SWITCH  
SELECT YES FOR UNDERFLOOR HEATING  
AND NO FOR ALL OTHER SYSTEMS

NOTE  
THE HOT-WATER VALVE LIVE FEED MUST BE  
CONNECTED THROUGH THE CYLINDER HIGH  
LIMIT THERMOSTAT

This equipment should be installed by an appropriately qualified/ registered electrician.  
Fully read the instructions for proper wiring before applying power.  
The warranty does not cover damage from improper wiring or installation.

DRAWING 4
NEO TO UH4 WIRING DIAGRAM
13/05/2015