


UH8

UFM UNDER FLOOR MANIFOLD

- LIVE ———
- SWITCH LIVE ———
- NEUTRAL ———
- EARTH ———
- END SWITCH AND BOILER ENABLE ———

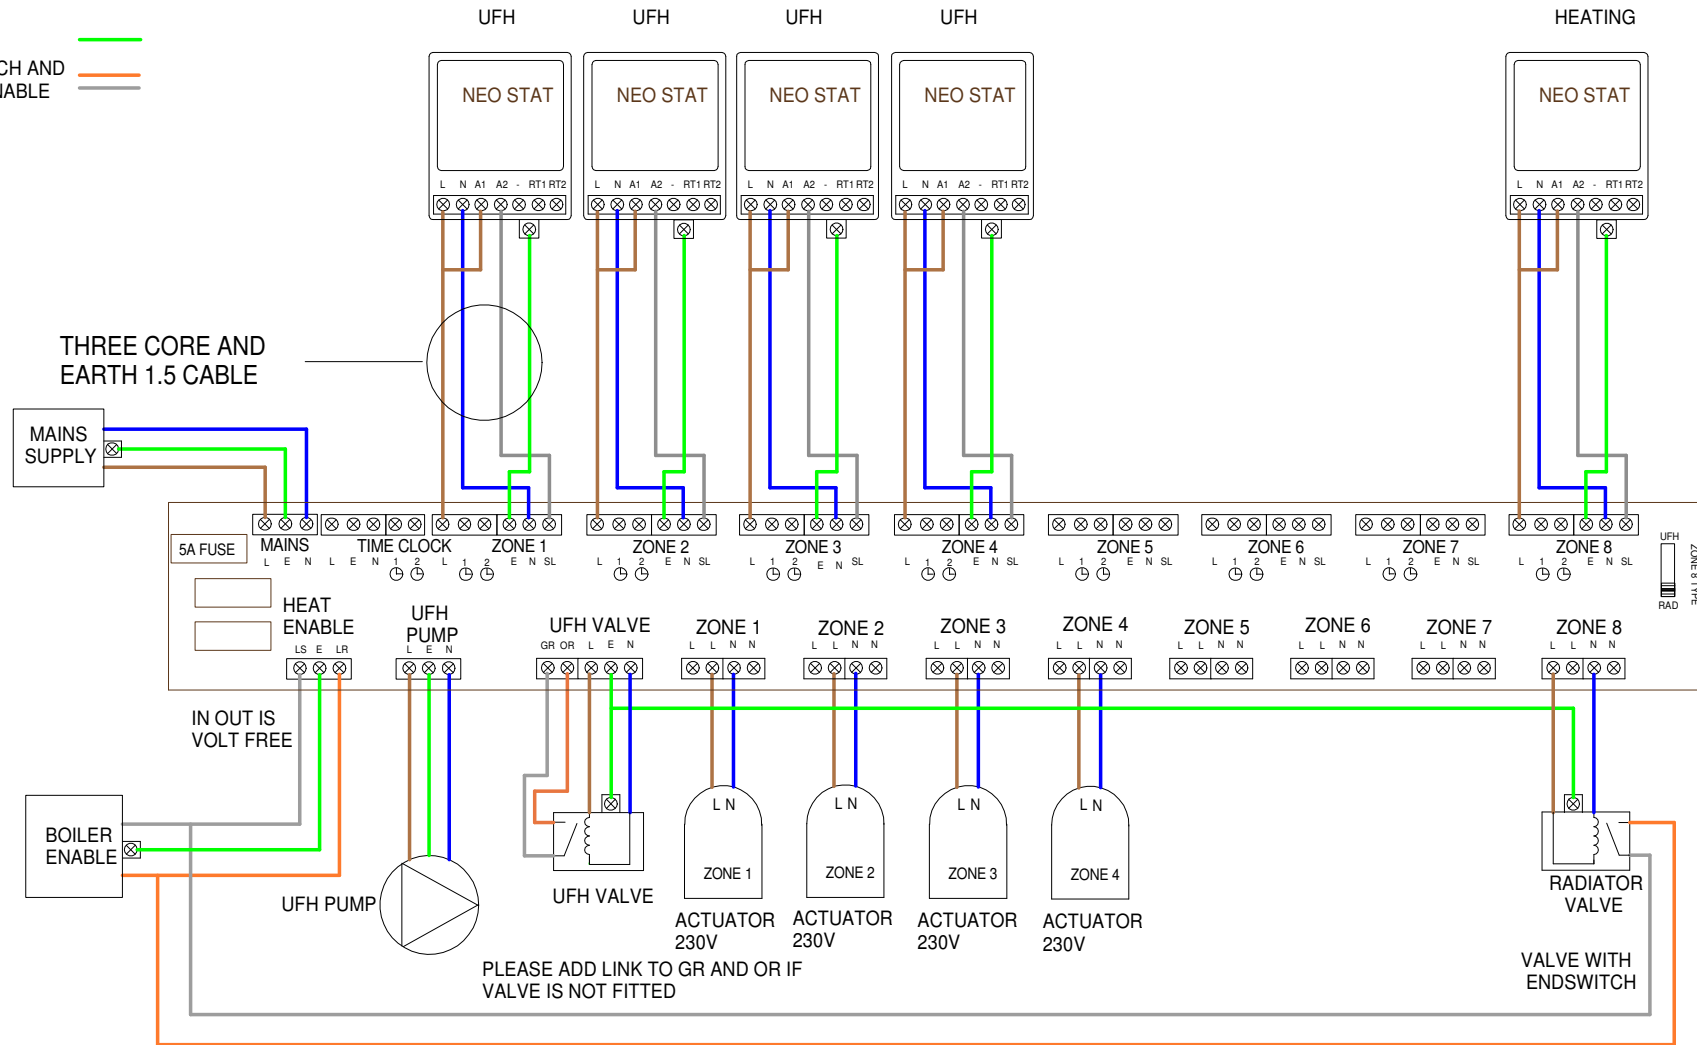

PLEASE ADD LINK TO GR AND OR IF VALVE IS NOT FITTED

This Equipment should be installed by an appropriately qualified/ registered electrician.
 Fully read the instructions for proper wiring before applying power.
 The warranty does not cover damage from improper wiring or installation.

DRAWING 2
NEO TO UH8 WIRING DIAGRAM
13/05/2015